

D. Install the TS-10 Digital Board, Check the Unit and Attach the Bottom Cover (TS-10 only)

1. Install the four (4) screws into the digital board.
2. Pop the digital board onto the five (5) standoffs, see **Figure 2**.
3. Reconnect all the cables to the digital board, see **step C 2**.

IMPORTANT! Make sure all audio cables are unplugged **BEFORE** turning the unit on. The first time you turn on the TS after updating the software, the unit may make a pop.

4. Turn the unit right side up and turn it on.
5. **Reinitialize** by holding down the **Presets** button and pressing the upper left black soft button. Then answer YES by pressing the upper right soft button.
6. Check the software version by holding down **Presets** and pressing **System**.
7. The second line of the display briefly shows ROM V X.XX. The version number (X.XX) should be the same as that printed on the label of the newly installed EPROMs.
8. Turn the unit off and turn it upside down.

USE NO MORE THAN 8 INCH POUNDS WHEN INSTALLING SCREWS!

9. Replace all the screws in the base and rear panels. **Note** that six (6) screws along key tip edge are self-tapping.
10. Load in the Sounds, Presets and Sequences that you saved in step B 1. See **Section H**, Disk Storage.
11. **Give the following items to the customer:**
 - a) Manual Addendums for Versions 2.0, 2.01, and 3,
 - b) General MIDI Logo Sticker,
 - c) TSD-300 disk; and
 - d) if provided, any other disks and/or software information sheets included with the kit.

E. Remove the TS-12 Bottom Cover and Digital Board (TS-12 only)

1. Remove the bottom cover, see **Figure 3**:
 - a) remove the six (6) #8-18x1/4 self-tapping screws from the dimples in a line;
 - b) remove the one (1) M4x10mm machine screw from the big dimple in the center of the base;
 - c) remove the two (2) #8-16x1/2 self-tapping screws from the wheel cover; and
 - d) remove the fifteen (15) #8-32x 1/4 machine screws.

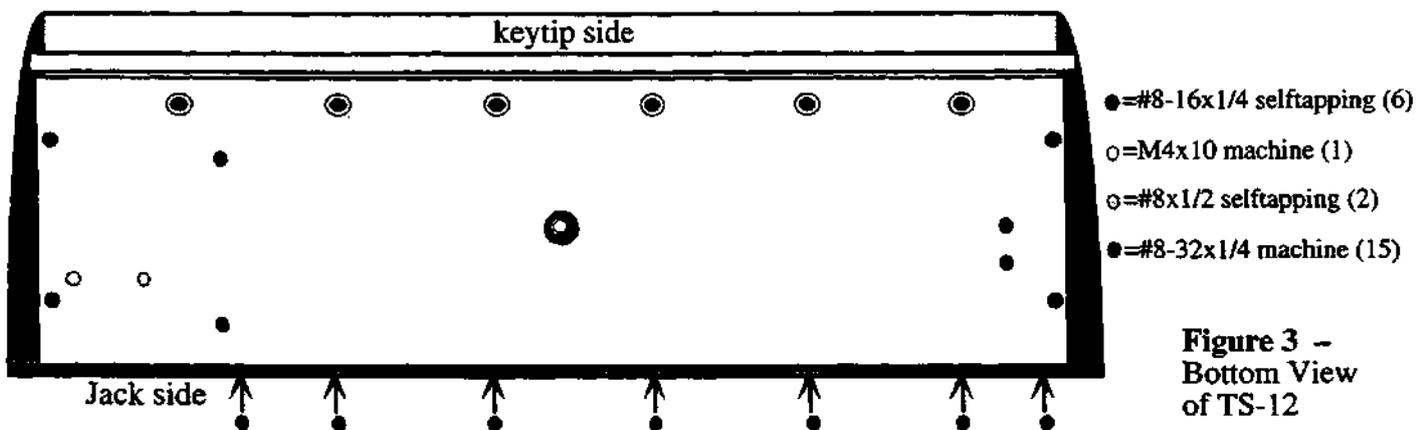


Figure 3 - Bottom View of TS-12